



NOTE – A blower is an air mover it moves air from the inlet to discharge the blower itself does not create any pressure it is the restrictions within the system pipework and the system that creates the pressure.